


Configure

The Configure tab contains icons for configuring your cockpit.

You can connect to various types of storage including local storage via [PMA.start](#), and [My Pathomation](#).

You can also manage all of the many possible panels in PIMS LS.

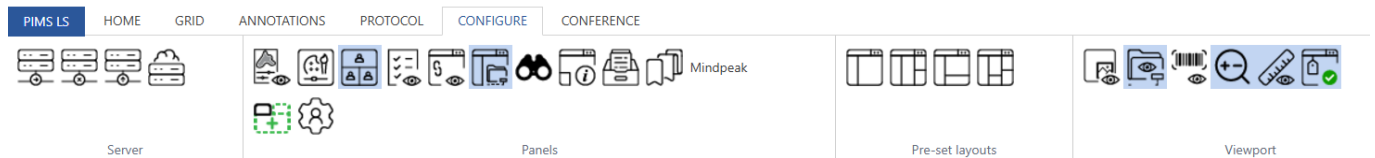

From:
<https://docs.pathomation.com/pimsls/3.0.1/> - **PIMS LS 3.0.1**

Permanent link:
<https://docs.pathomation.com/pimsls/3.0.1/doku.php?id=configure&rev=1733241594>

Last update: **2024/12/03 18:59**

