


# Configure

The Configure tab contains icons for configuring your cockpit.

You can connect to various types of storage including local storage via [PMA.start](#), and [My Pathomation](#).

You can also manage all of the many possible panels in PIMS LS.

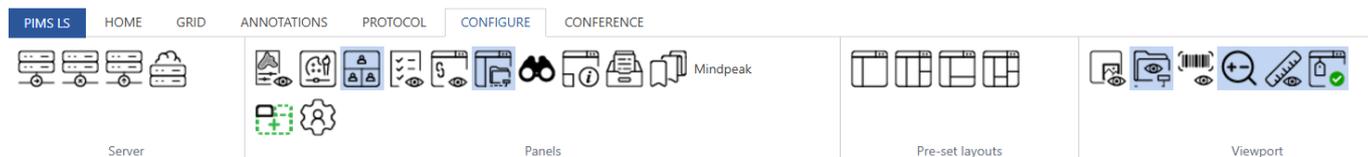

From:  
<https://docs.pathomation.com/pimsls/3.1.0/> - **PIMS LS 3.1.0**

Permanent link:  
<https://docs.pathomation.com/pimsls/3.1.0/doku.php?id=configure&rev=1733241594>

Last update: **2024/12/03 18:59**

