


# Configure

The Configure tab contains icons for configuring your cockpit.

You can connect to various types of storage including local storage via [PMA.start](#), and [My Pathomation](#).

You can also manage all of the many possible panels in PIMS LS, as well as quickly jump to pre-set layouts of panels and toggle on/off Viewport elements e.g. the slide overview.

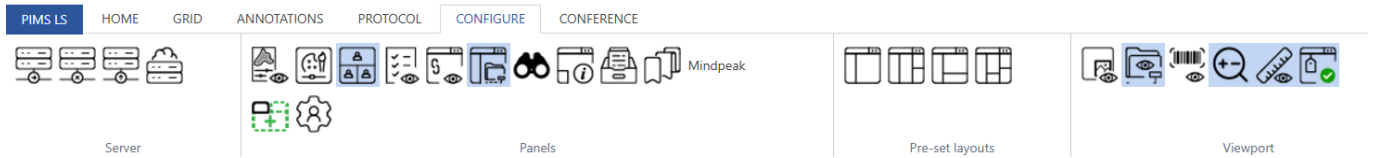

From:  
<https://docs.pathomation.com/pimsls/3.1.0/> - **PIMS LS 3.1.0**

Permanent link:  
<https://docs.pathomation.com/pimsls/3.1.0/doku.php?id=configure&rev=1733315539>

Last update: **2024/12/04 15:32**

