


# Other Tools

## Add/Remove Row - Add/Remove Columns



These tools allows us to add new rows to the current grid, delete rows, and add or remove new columns. This allows user to open up multiple slides in a grid view.

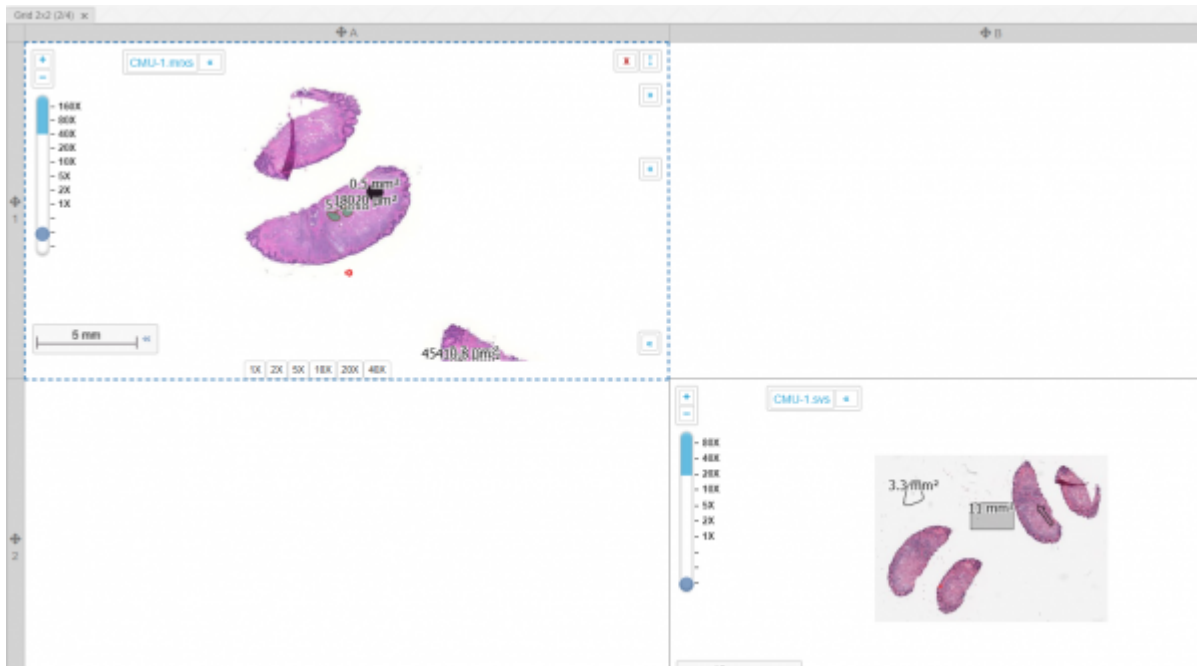

From:  
<https://docs.pathomation.com/pimsls/3.1.1/> - PIMS LS 3.1.1

Permanent link:  
[https://docs.pathomation.com/pimsls/3.1.1/doku.php?id=other\\_grid\\_tools&rev=1747062794](https://docs.pathomation.com/pimsls/3.1.1/doku.php?id=other_grid_tools&rev=1747062794)

Last update: 2025/05/12 18:13

