


# Other Tools

## Add/Remove Row - Add/Remove Columns




These tools allows us to add new rows to the current grid, delete rows, and add or remove new columns. This allows user to open up multiple slides in a grid view.

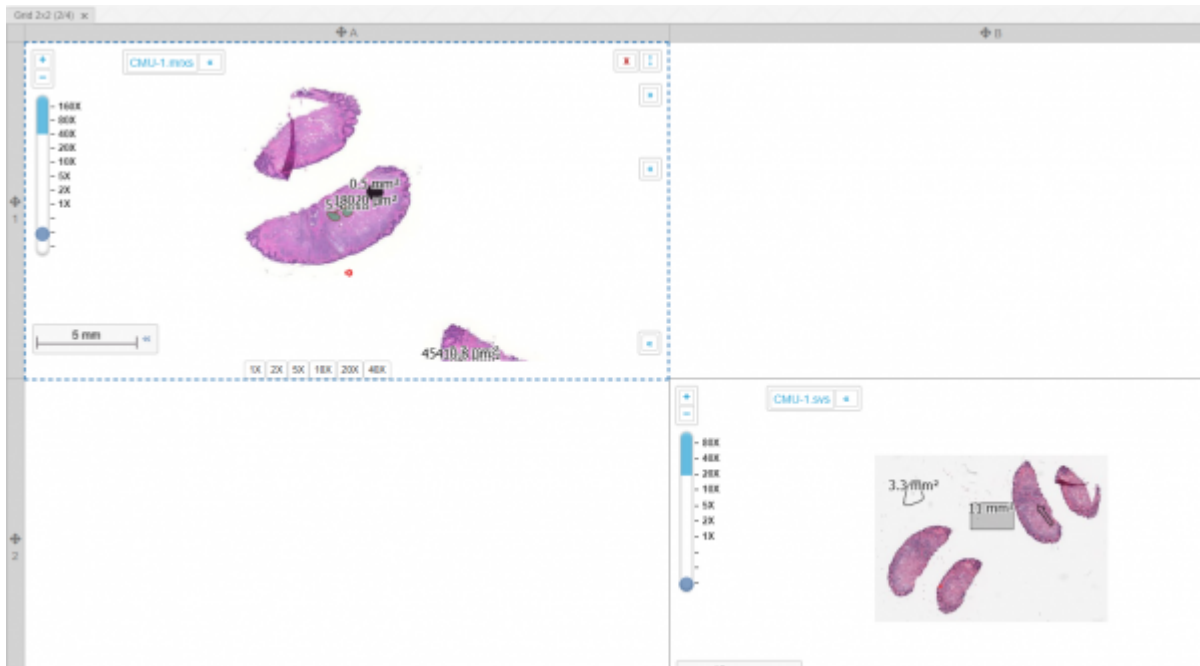

## Grid snapshot



This tool allows user to take snapshot of the whole grid

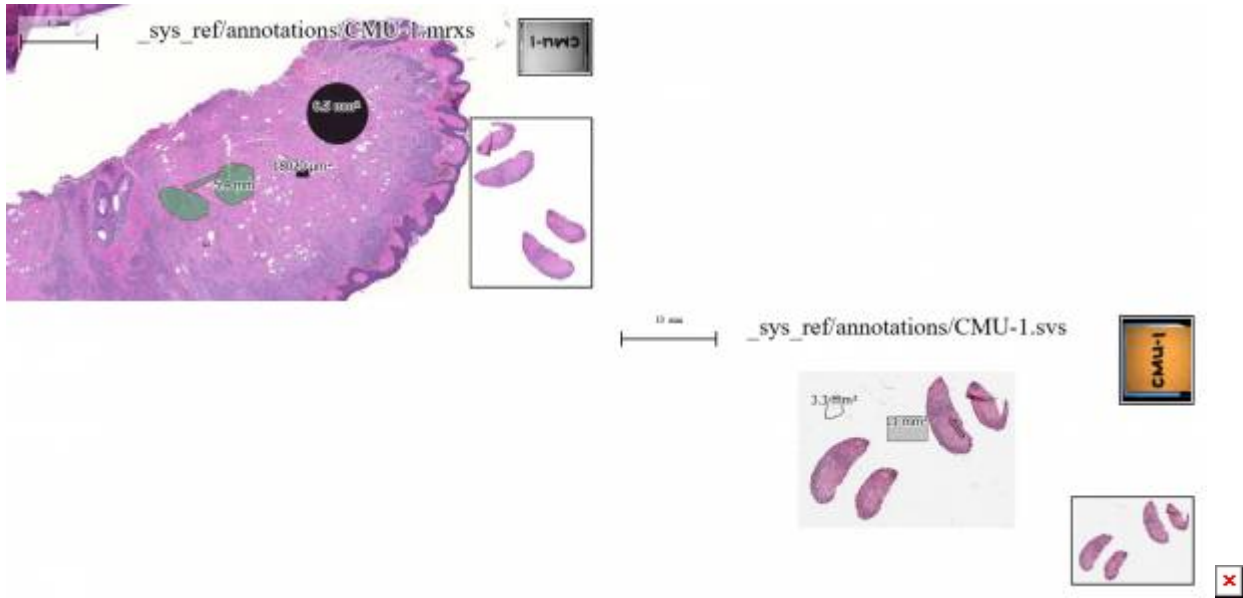

From:  
<https://docs.pathomation.com/pimsls/3.1.1/> - PIMS LS 3.1.1

Permanent link:  
[https://docs.pathomation.com/pimsls/3.1.1/doku.php?id=other\\_grid\\_tools&rev=1747063358](https://docs.pathomation.com/pimsls/3.1.1/doku.php?id=other_grid_tools&rev=1747063358)

Last update: 2025/05/12 18:22

