

# License handling

This wiki entry is about the technical aspects of licensing in PMA.core. Pathomation's [license policy is described on its website](#).


Pathomation has a software licensing scheme that involves the exchange of license files.

Based on the duration of your agreement, we issue you a license file that incorporates parameters like expiration date and number of concurrent roaming seats. The license file is tied to your particular installation of PMA.core and non-transferrable to other instances (this includes virtual machines) or installation folders.


The PMA.core user interface includes everything you need to initiate and update your own installation and licensing scheme.

## Access to license management

You gain access to PMA.core's license management by clicking on the icon from the main management interface:

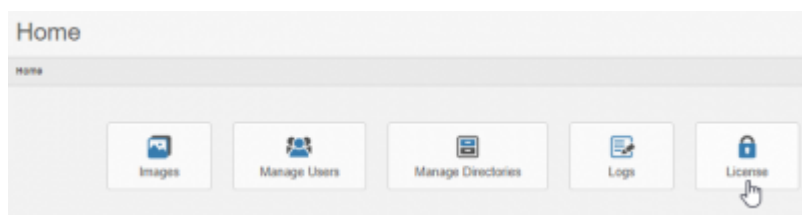


Alternatively, you can access the license management at any time from anywhere in the interface via the menu option in the left navigation menu:

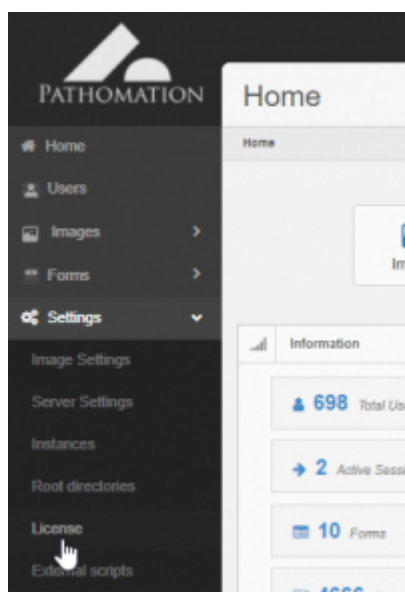

## Missing or expired license

If no license is installed, you'll see an error message immediately after logging in. You should [contact](#)

[Pathomation](#) to obtain a [license](#) in this case.

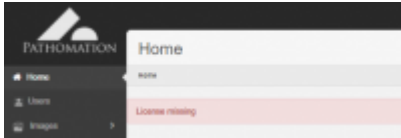

## Exceeded concurrency

From:  
<https://docs.pathomation.com/pma.core/2.0.2/> - **PMA.core 2.x**

Permanent link:  
<https://docs.pathomation.com/pma.core/2.0.2/doku.php?id=licensing&rev=1646653659>

Last update: **2022/03/07 14:47**

