Configure

The Configure tab contains icons for configuring your cockpit.

You can connect to various types of storage including local storage via PMA.start, and My Pathomation.

You can also manage all of the many possible panels in PIMS LS.

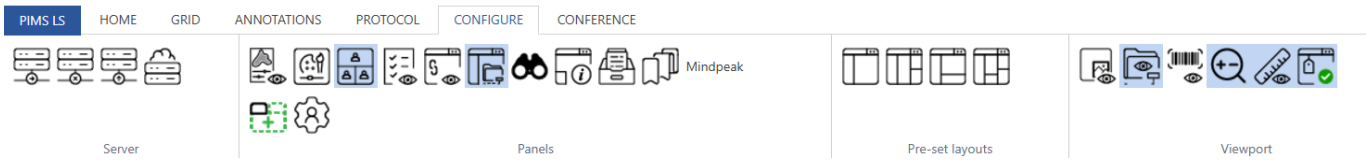

From:
https://docs.pathomation.com/pimsls/3.1.0/ - **PIMS LS 3.1.0**

Permanent link:
https://docs.pathomation.com/pimsls/3.1.0/doku.php?id=configure&rev=1733241594

Last update: **2024/12/03 16:59**